


Model 136 Installation Template

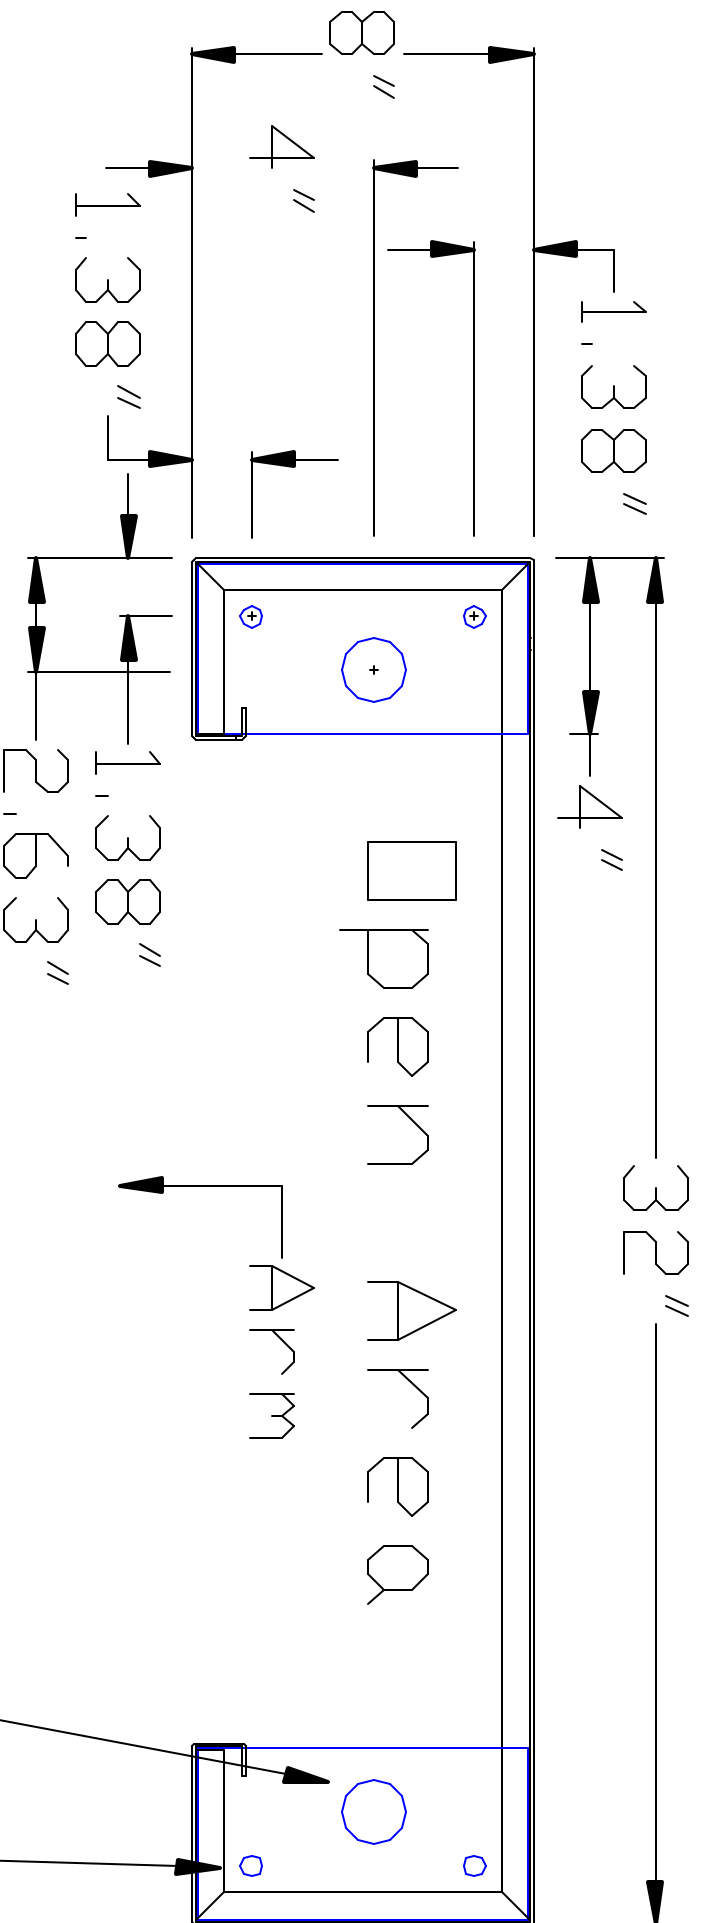

1.5" Conduit Hole

1/2" Anchor Bolt Hole

DO NOT SCALE DRAWING

- MOUNTING NOTES:**
- 1) MOUNTING SURFACE TO BE RIGID, LEVEL AND FLAT TO WITHIN 9/32"
 - 2) USE GRADE 5 MINIMUM (1/2") FASTENERS AND CHECK PERIODICALLY (AS REQUIRED) TO INSURE TURNSTILE IS SECURELY FASTENED AND DOES NOT ROCK.
 - 3) PEREY TURNSTILES, INC. ACCEPTS NO RESPONSIBILITY WHATSOEVER FOR THE PERFORMANCE OF NON-PEREY EQUIPMENT INSTALLED WITH THIS PRODUCT.
 - 4) UNDER NO CIRCUMSTANCES INSTALL ANY ACCESSORIES THAT REQUIRE IN EXCESS OF 24 VDC. NEVER USE THE TURNSTILE AS A COMPONENT (SUCH AS A GROUND) OF AN EXTERNAL CIRCUIT. IF SUCH A NEED ARISES, ISOLATE THE TURNSTILE AND PROVIDE A SEPARATE GROUND FOR THE EXTERNAL CIRCUIT.
 - 5) CHECK ALL LOCAL, STATE AND NATIONAL BUILDING CODES PRIOR TO INSTALLATION. WHERE CONFLICTS ARISE, THE MOST STRINGENT REQUIREMENTS SHALL APPLY.

NOTES:
 1) THIS DRAWING IS THE PROPERTY OF PEREY TURNSTILES AND SHALL BE KEPT IN CONFIDENTIALITY. ANY REPRODUCTION OR DISTRIBUTION WITHOUT WRITTEN PERMISSION SHALL BE DEEMED AN INFRINGEMENT OF PATENT RIGHTS.
 2) PEREY TURNSTILES, INC. ACCEPTS NO RESPONSIBILITY FOR THE PERFORMANCE OF NON-PEREY EQUIPMENT INSTALLED WITH THIS PRODUCT.

REV	DATE	BY	APP'D	PART NAME
				Model 136
				Base
				Part No. N/A